

# INSTRUCTION MANUAL

## Smart password lock

### 103-3-CK Series



CE/FCC/PSE/ROHS/SGS

## Contents

### 1. Operation Instructions

- 1.1 Password lock
- 1.2 User locked
- 1.3 Change password
- 1.4 Password reset

### 2. Other instructions

- 2.1 Charging instructions
- 2.2 Sound and light hint
- 2.3 Technical parameters

### 1. Operation instructions

#### 1.1 password lock: input "user password + " OK "to" turn the knob unlock

New lock factory default user password is 1, users can input "1 + OK" to hear sound, turn the lock knob in 3 seconds to unlock. The user can amend their own password according to the below 2.3 .

#### 1.2 User lock: turn the counterclockwise knob to put the lock in place

At any time, just reverse the knob to the locking position to lock

#### 1.3 Password modification: Enter " old password +C+ new password (1-12 digital)+OK "

Enter "old password +C+ new password +OK", and the long sound system indicates success. For example: change the factory password 1 to 123, then enter "1+C+ 123 +OK" and hear the long sound, that means the new password is 123 password.

#### 1.4 Password reset:

When a user accidentally forget the password, can be decoding through the following ways:

1. there is a "Reset" to Reset hole on the underside of the lock, use a paper clip press the factory password recovery.
2. work mode can be divided into "private" and "utility model", long press the "reset button" for 3 seconds, after a long "di" sound, conversion between two kinds of working mode, working mode to common mode.
3. If the cabinet locked, can use the spare key to open the lock, press the reset button to restore the factory password again.

### 2. Other instructions

#### 2.1 power and charging instructions:

1. lock when the battery is low, after the lock or unlock if there are any indicator lights flashing and associated with "di, di di" sound, three prompt said battery is insufficient, can unlock 30 times in this case, please charge or replace the battery.
2. use the charger or charging treasure to lock, when charging indicator lights red and green and stop charging, charging port in the lock body side.

#### 2.2 Voice hint

No	Name	Audio and video synchronization instructions	containing
1	key switch	"di" - short ring	the key switch effective
2	unlock	"di" - long ring	Correct operation, unlock/change password successful
3	Error	di di double ring	Operation error, invalid input
4	Battery low	"di" "di" "di" 3 times	battery low, please charge
5	alarm	di - alarm ring	Three consecutive errors will sound for about 60 seconds

#### Note:

1. When the battery is low, the lock can be unlocked for about 50 times when the battery is exhausted. Please charge it as soon as possible.
2. If the password is wrong for 3 times in a row, the password lock will alarm for 60 seconds. If the correct password is entered, it can be removed.

#### 3.2 Technical parameters

working voltage	DC4 - 4.2V
battery specification	Built-in lithium battery 250Mah
standby current	≤2Ua
maximum current	≤5Ma, and last ≤35ms
battery life	2 years workable, can unlock 20-50 times every day
working temperature	-20°C ~ 70°C
relative humidity	20% ~80%
composition material	Zinc alloy/ABS
Install the aperture	Suitable for diameter 19mm-23mm
thickness requirements	steel: 0.5-12mm, wood:0.5-22mm
certification testing	CE/FCC/PSE/ROHS/SGS

### Assembly drawing

